

Adjustment instructions switching amplifiers Series CLS 45


The response of the probe depends on the type of adhesive (EVA, PA, PO, PU) and the kind and quantity of fillers contained in the adhesive.
Therefore when

- installing a new container and/or
- changing the type of adhesive
- installing a new levelsensor

the actual presetting must be examined!

If an adjustment has to be made, you have to proceed as follows:

- Remove the front cover
- Fill the container to the desired level whilst observing the permissible maximum immersion depth of the probe
- Adjust the potentiometer until LED changes from RED to GREEN
Anticlockwise rotation: Change to LED – GREEN
Clockwise rotation: Change to LED - RED

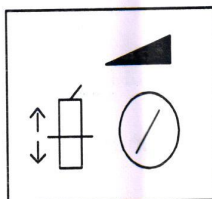

Adjustment possibilities during the application:

Anticlockwise rotation: level is decreasing

Clockwise rotation: level is rising